


### LEARNING PROCEDURE

After having completed the connections turn on the ignition **START THE ENGINE**, the LED will flash RED quickly indicating that the **NO BUTTON PRESSED** state has been memorized.

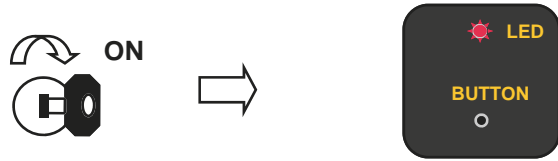

Now you must assign the functions of control of the aftermarket radio to the buttons/levers of the vehicle's steering wheel command.

The programming of the functions follows the sequential logic which is described below in TAB.

The first function available is VOLUME —.

For each button pressed the LED will blink RED to indicate that the function is associated.

Follow the below order.

- 1 VOLUME -
- 2 VOLUME +
- 3 SEEK -
- 4 SEEK +
- 5 SOURCE -
- 6 MUTE -
- 7 PRESET



Once assigned the 7 functions, press 3 times the UNICOM button. **The LED will light GREEN.**

The learning procedure has been completed, insert the PLUG of the UNICOM in the appropriate input on the back of the radio.

Switch on the autoradio, tune in the radio and use the vehicle's steering wheel commands to handle the functions; should any defects occur, make a RESET, repeat very carefully the LEARNING PROCEDURE from the beginning.

To RESET the unit keep the button of the unit pressed till the LED starts blinking RED.



**ATTENTION MANAGE THE LEARNING PROCEDURE WITH THE VEHICLE WITH ENGINE ON!**

### WARRANTY CONDITIONS

**THIS PRODUCT HAS A TWO-YEAR GUARANTEE FOR ANYKIND OF PRODUCTION DEFECT THE FISCAL SALES DOCUMENT IS NECESSARY FOR THE VALIDITY OF OF THE GUARANTEE**

The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.

## MANUALE DI INSTALLAZIONE

# UNICOM/H2

## Adattatore per comandi a volante

## HUMMER H2

## ed Autoradio JVC



## con ingresso remote filare rev. 4.0 11

Il modulo è un adattatore per comandi a volante resistivi, la sua compatibilità si estende alle vetture **HUMMER H2** (2005) ed alle autoradio della gamma JVC aventi ingresso per comando filare sul retro dell'autoradio.

### INSTALLAZIONE:



Collegare il filo ROSA dell'interfaccia al filo VERDE della vettura

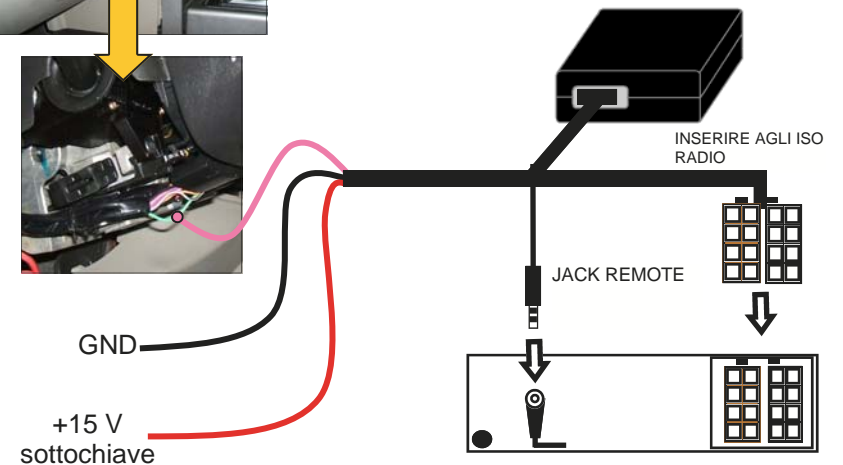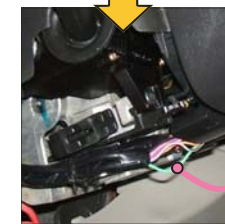

The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.

### PROCEDURA DI APPRENDIMENTO

Eseguiti i collegamenti **mettere in moto la vettura** per dare alimentazione ad UNICOM, il LED emetterà un breve lampeggio ROSSO indicando la memorizzazione della condizione **NESSUN TASTO PREMUTO**.



Ora bisogna assegnare le funzioni di controllo della radio aftermarket ad ognuno dei pulsanti / leve del comando al volante della vettura.

L'assegnazione delle funzioni per ogni pulsante / leva segue la logica descritta nella tabella sotto.

La prima funzione associabile è **VOLUME -**.

Ad ogni pressione di un pulsante / leva del comando al volante, il LED di UNICOM emetterà un lampeggio breve ad indicare l'avvenuta memorizzazione della funzione.

**Seguire l'ordine delle pressioni sotto descritte.**

- 1 VOLUME -
- 2 VOLUME +
- 3 SEEK -
- 4 SEEK +
- 5 SOURCE -
- 6 MUTE -
- 7 PRESET



Una volta memorizzate le 7 funzioni, premere 3 volte il tasto di UNICOM. Il LED rimane acceso VERDE.

La procedura di apprendimento è conclusa, inserire il PLUG di UNICOM nell'ingresso apposito sul retro della radio.

Accendere l'autoradio, sintonizzare la radio ed utilizzare i comandi al volante della vettura per gestirne le funzioni; qualora si evidenziassero delle anomalie, eseguire il RESET e ripetere attentamente la PROCEDURA DI APPRENDIMENTO dall'inizio.

Per eseguire il RESET tenere premuto il pulsante di UNICOM fino a che il LED non lampeggia ROSSO.



**ATTENZIONE ESEGUIRE LA PROGRAMMAZIONE A VETTURA IN MOTO!**

### CONDIZIONI DI GARANZIA

QUESTO PRODOTTO E' GARANTITO 2 ANNI PER QUALSIASI DIFETTO DI FABBRICAZIONE. COME VALIDITA' DELLA GARANZIA FA FEDE LA FATTURA DI ACQUISTO

Per ogni eventuale assistenza, contattare il numero di supporto tecnico: **0141-947676**

Le informazioni riportate in questo manuale sono puramente a scopo informativo pertanto possono subire modifiche senza preavviso. Al momento della pubblicazione le informazioni risultano corrette ed attendibili. Tuttavia Paser non può essere ritenuta responsabile per eventuali conseguenze derivanti da errori od omissioni del presente manuale. Paser si riserva il diritto di migliorare/modificare il prodotto o il manuale senza l'obbligo di notifica agli utenti.

## INSTALLATION MANUAL

### UNICOM/H2

Adapter for steering wheel commands

### HUMMER H2

for JVC Autoradios

with wired remote input rev. 4.0 11

The module is an adapter for RESISTIVE steering wheel commands; its compatibility extends to all the **HUMMER H2** (2005) and to the autoradios in the JVC range having an input for a wired command at the back of the autoradio.

#### INSTALLATION:



Connect PINK interface's wire to the GREEN car's wire

