


	<h1 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h1>	
---	--	---



VOLKSWAGEN 1

For a right functionality it is necessary to enable the function in the car system by using the VAS computer. Follows the steps below described.



1 Connect the computer diagnosis VAS to the OBD plug of the car.

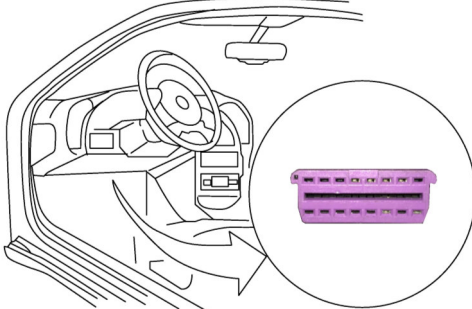



2 Select the voice **Auto diagnosis**

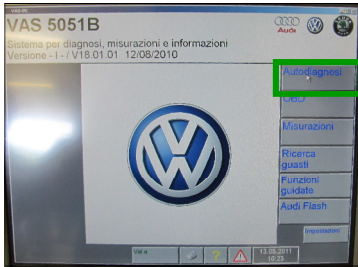
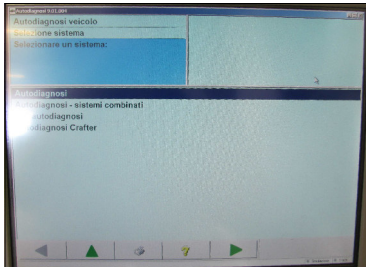
3 Select the address 19 then in the next page select the profile 008.

4 Once in the profile 008 select the code list of installation then the address 10 Parking sensors control system.

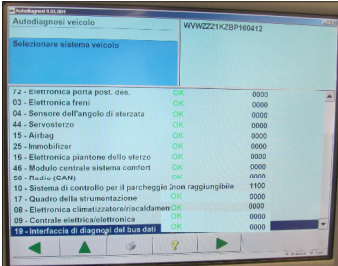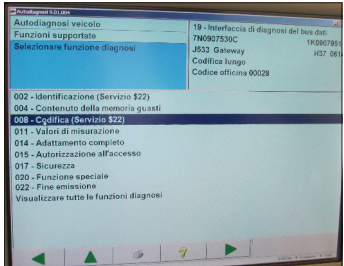5 Confirm the coding, the system will give the OK once the coding is done. Activation is done.

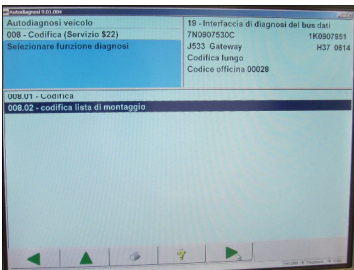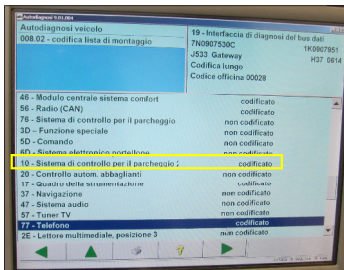



	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---

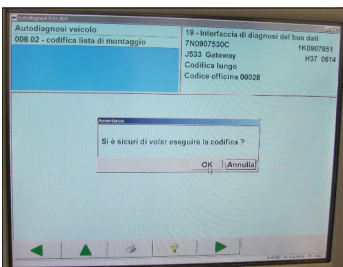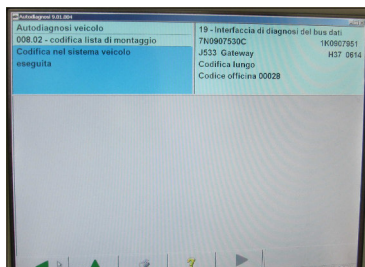
VOLKSWAGEN 2 (G7 PLATFORM)

For a right functionality it is necessary to enable the function in the car system by using the VAS computer. Follows the steps below described.


1 Connect the computer diagnosis VAS to the OBD plug of the car.

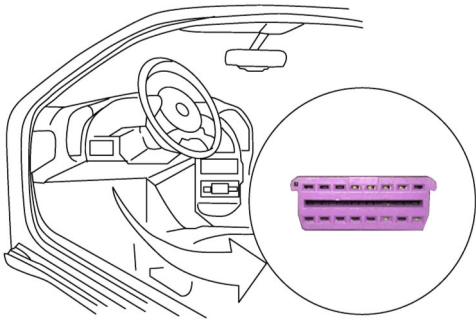


2 Select the voice **Auto diagnosis**

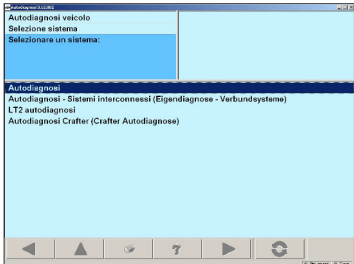


3 Select the address 19 then the voice 5F and consequently the position 012.

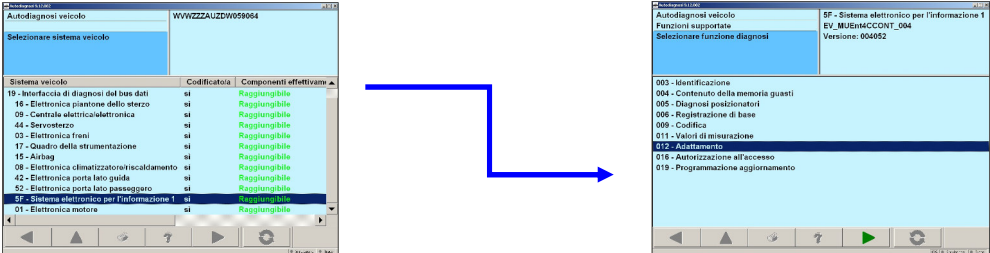

4 Select the code list BAPand then park assist.

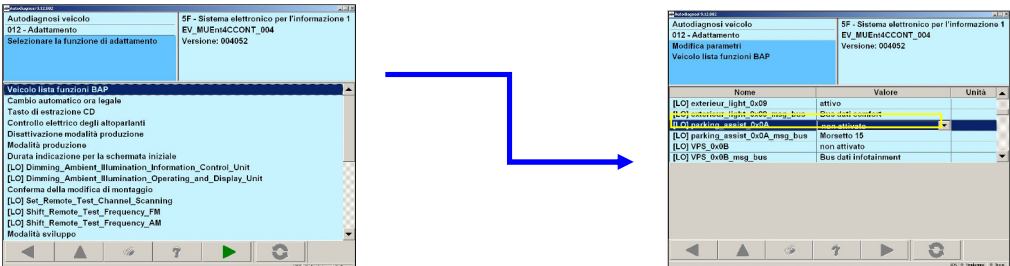

5 Confirm the coding, the system will give the OK once the coding is done. Activation is done.

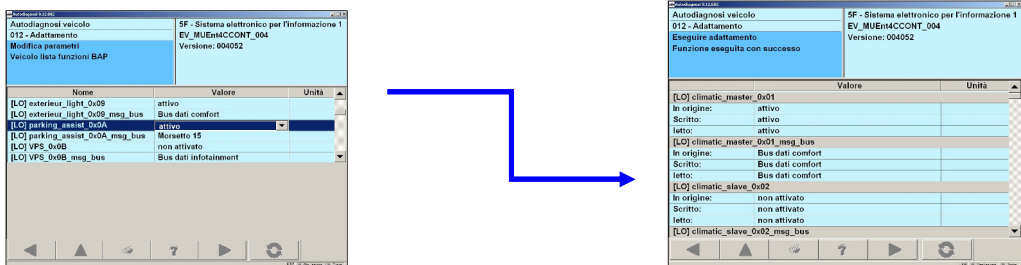


	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---


VOLKSWAGEN 3 (SKODA OCTAVIA 2013> PLATFORM)

For a right functionality it is necessary to enable the function in the car system by using the VAS computer. Follows the steps below described.


1 Connect the computer diagnosis VAS to the OBD plug of the car.

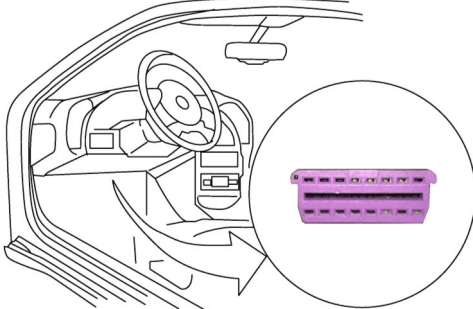


2 Select the voice **Adjustment**.

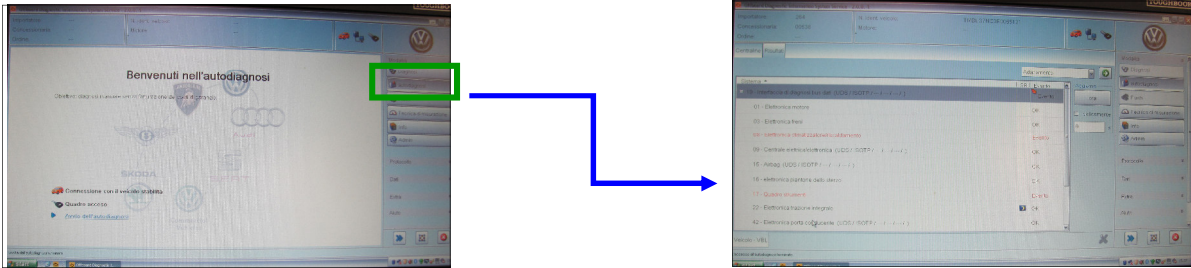


3 Select the address IFE_5F then in the next page select the central unit auto diagnosis.

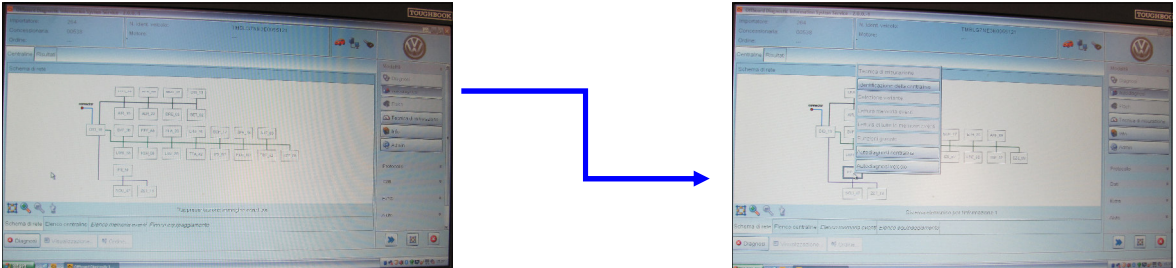

4 Once in the profile central unit auto diagnosis select the voice adjustment then in the next page car code list BAP.

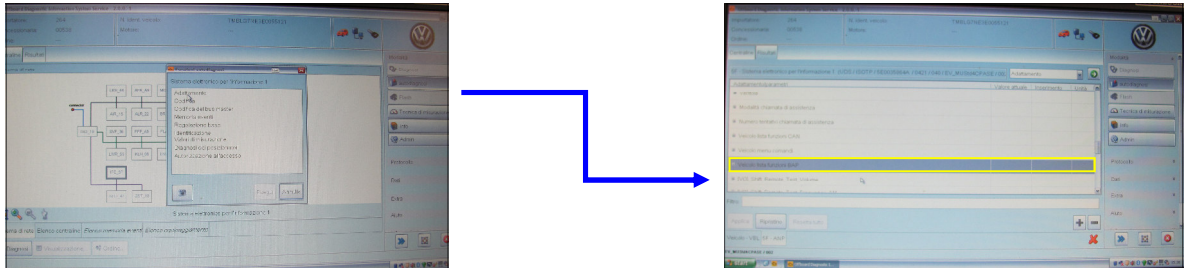

5 Select the voice parking assist and then click Apply. Activation is done.

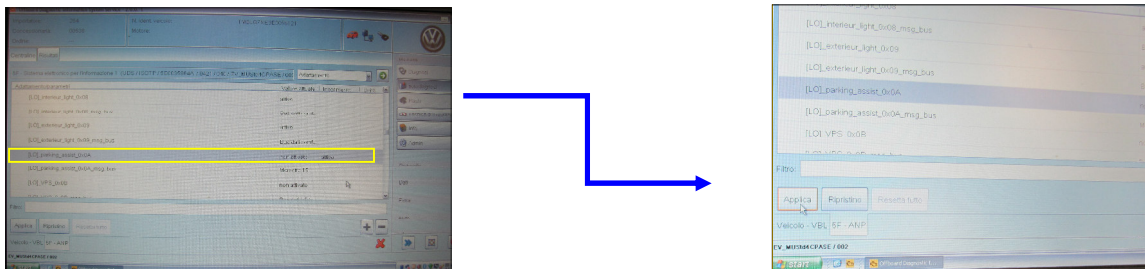


	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---


VOLKSWAGEN 4 (Skoda Octavia 2013 / Seat Leon 2013 / VW Golf 7 / Audi A3 2014 / VW Polo 2014 / Seat Toledo 2015)

For a right functionality it is necessary to enable the function in the car system by using the ODIS computer.
Follows the steps below described.


1 Connect the computer diagnosis ODIS to the OBD plug of the car.

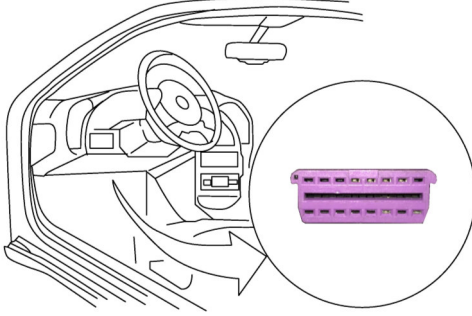


1) Click on DID_19 unit
2) Select Control unit self-diagnosis

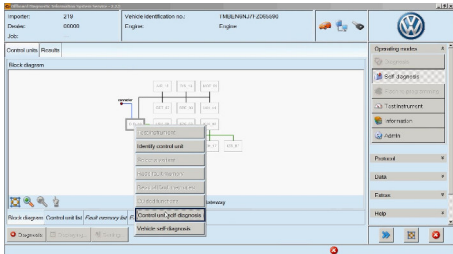


3) Click on Adaptation

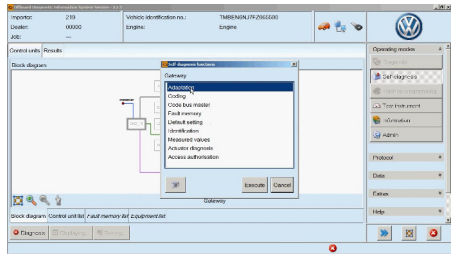


4) Expand Installation list, specified installations menu

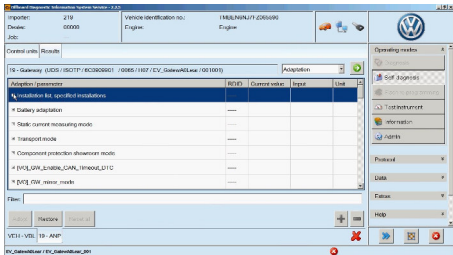


5) Set Parking Assistance to CODED

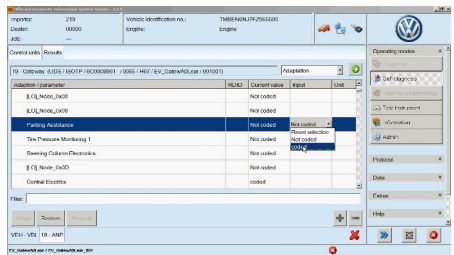


6) Save configuration
7) Go back to Control units and select IFE_5F unit

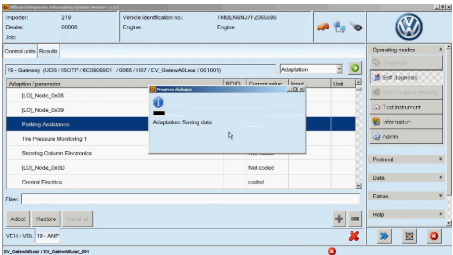


8) Select Control unit self-diagnosis

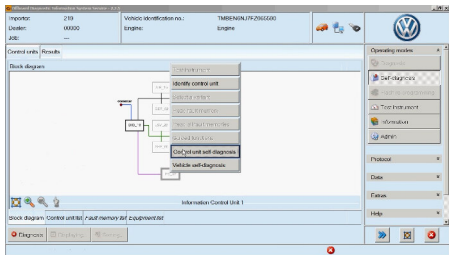

9) Click on Adaptation

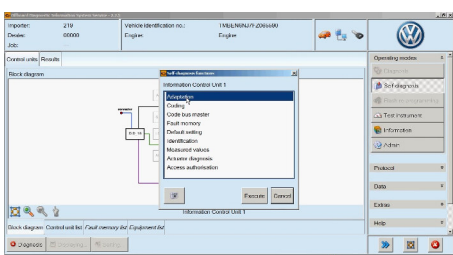


10) Expand [VO]_Car_Functions_Adaptations_Gen2 menu

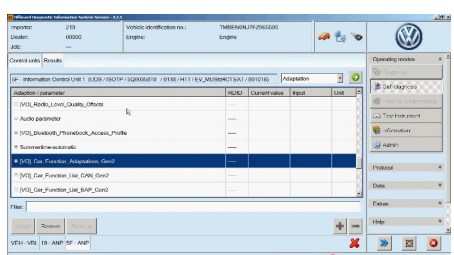

	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---


VOLKSWAGEN 4 (Skoda Octavia 2013 / Seat Leon 2013 / VW Golf 7 / Audi A3 2014 / VW Polo 2014 / Seat Toledo 2015)

11) Enable following functions:
[LO]_menu_display_pdc
[LO]_menu_display_pdc_clamp_15_off
[LO]_menu_display_pdc_over_threshold_high
[LO]_menu_display_pdc_standstill
[LO]_menu_display_pdc_after_disclaimer

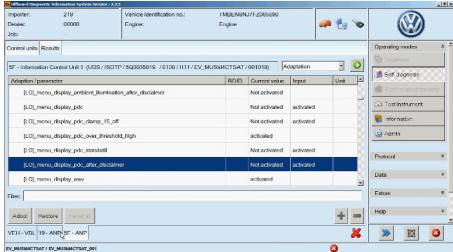


Adaptation parameter	Block	Current value	Input	Unit
[LO]_menu_display_pdc	Not activated	activated		
[LO]_menu_display_pdc_clamp_15_off	Not activated	activated		
[LO]_menu_display_pdc_over_threshold_high	Not activated	activated		
[LO]_menu_display_pdc_standstill	Not activated	activated		
[LO]_menu_display_pdc_after_disclaimer	Not activated	activated		

12) Save configuration
 13) Close **[VO]_Car_Functions_Adaptations_Gen2** menu
 14) Expand **[VO]_Car_Functions_List_BAP_Gen2** menu

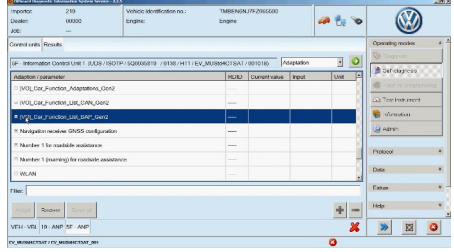


Adaptation parameter	Block	Current value	Input	Unit
[VO]_Car_Functions_Adaptations_Gen2				
[VO]_Car_Functions_List_BAP_Gen2				

15) Set following functions like described:
[LO]parking_assist_0x0A -> Set to ACTIVATED
[LO]parking_assist_0x0A_msg_bus -> Set to Terminal 15

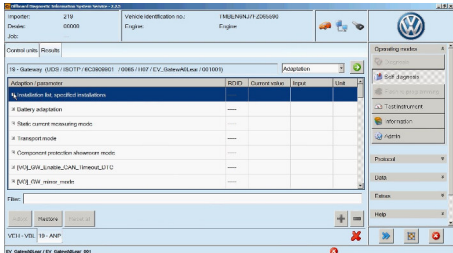

Adaptation parameter	Block	Current value	Input	Unit
[LO]parking_assist_0x0A	Not activated	activated		
[LO]parking_assist_0x0A_msg_bus	Not activated	Terminal 15		

16) Save configuration

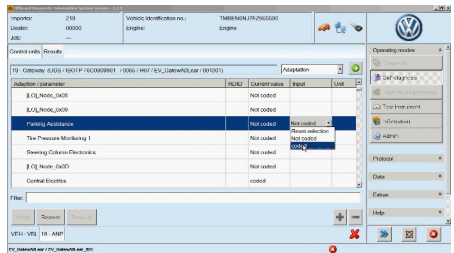

Adaptation parameter	Block	Current value	Input	Unit
[LO]parking_assist_0x0A	Not activated	activated		
[LO]parking_assist_0x0A_msg_bus	Not activated	Terminal 15		

For a correct operation on the AUDI A3, it's necessary to do another enabling on the car central unit, by using the ODIS.

Please, follow these steps here below:


- Entry into the Units section where all units of the car will be displayed;
- Select the address 76: a scroll menu will be opened;
- By the scroll menu, select the item UNIT SELF-DIAGNOSIS;
- In the following window, select the item ACCESS PERMISSION and click on Apply;
- In the following window, select the login "(VO)_Login" method and input the login code 71679; then click on Apply;
- Done this procedure, ODIS will go back to the scroll menu window about the address 76;
- Select again the item UNIT SELF-DIAGNOSIS;
- In the following window, select the voice ENCODE and click on Apply;
- To the scroll menu window, set the item "WITH OPS (BAP 4.0)";
- It will be requested to do the encode: click on "YES";
- Done the ODIS encode, the system will go back to the central Units window.
- The enabling is done successfully.






AUDI A1

For a right functionality it is necessary to enable the function in the car system by using the ODIS computer. Follows the steps below described.




- 1** Connect the computer diagnosis ODIS to the OBD plug of the car.

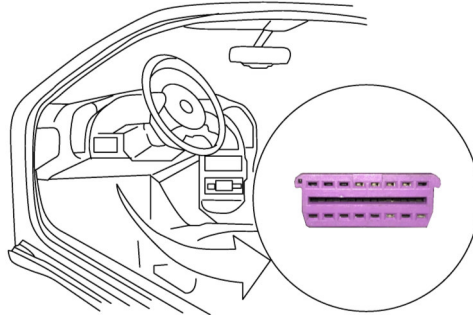




- 2** Please select address **DID_19** so on the next view please select **Control unit self-diagnosis profile**.

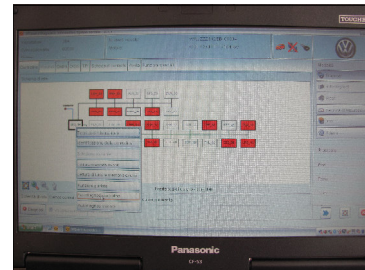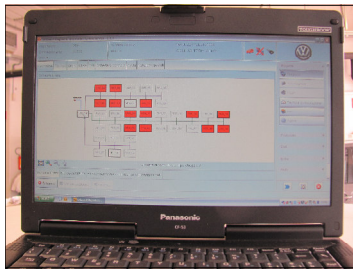

- 3** Select **Bus Master Encode** and enable **10 - Parking System Control 2**.

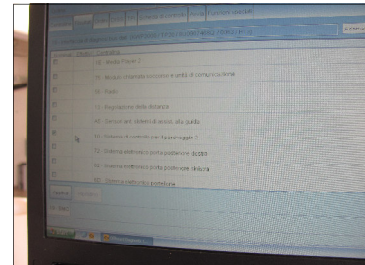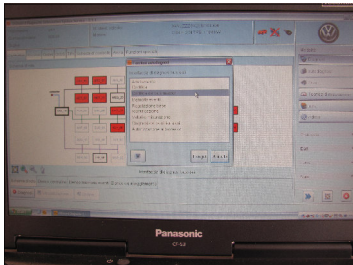

- 4** Click on **Apply** complete the encode.

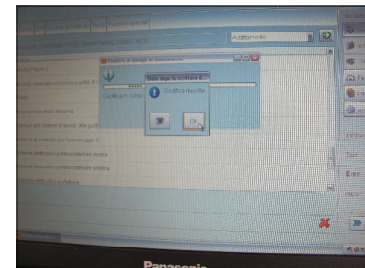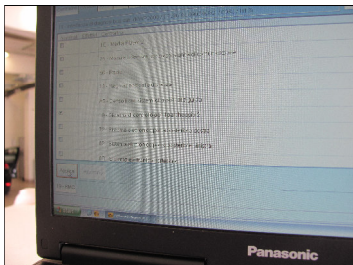
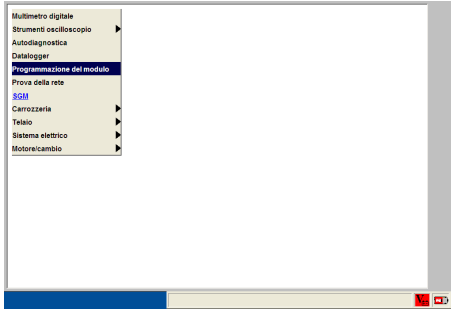



1. Entry into the Units section where all units of the car will be displayed;
2. Select the address **PLA_10**, a scroll menu will be displayed;
3. By the scroll menu, select the item **UNIT SELF-DIAGNOSIS**;
4. In the following window, select the item **ACCESS PERMISSION** and click on Apply;
5. In the following window, select the login "**(VO)_Login**" method and input the login code **71679**; then click on Apply;
6. Done this procedure, ODIS will go back to the scroll menu window about the address **PLA_10**;
7. Select again the item **UNIT SELF-DIAGNOSIS**;
8. In the following window, select the voice **ENCODE** and click on Apply;
9. To the scroll menu window, set the item "**WITH OPS (BAP 4.0)**";
10. It will be requested to do the encode: click on "**YES**";
11. Done the ODIS encode, the system will go back to the central Units window.
12. The enabling is done successfully.


	<h1 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h1>	
---	--	---


FORD


Once the connections are done it must to activate the Ford car to visualize the kit installed to do this please use the Ford computer diagnosis IDS of Ford. Follow the steps below:


1	Connect the IDS to the OBD plug and enter the modules parameters programming.		
----------	---	---	--

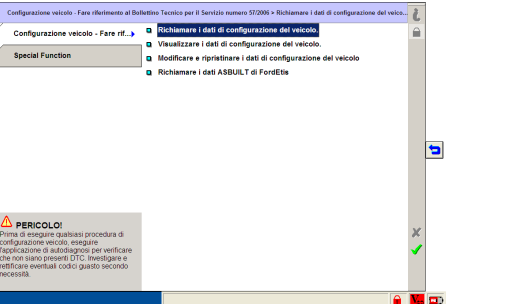
2	Recall the car data configuration of the vehicle	
----------	--	--

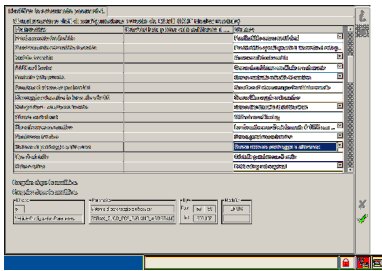3	Scroll the list of the parameters till find the voice: ultrasonic parking system , that usually is set as: without ultrasonic parking system	
----------	--	--

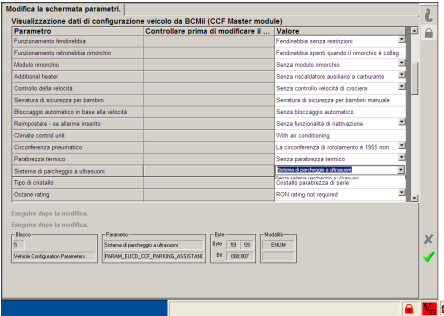4	Scroll the menu and set the voice as ultrasonic parking system	
----------	---	---

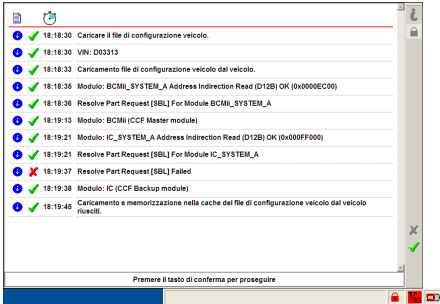5	Follow the indications and in the end confirm.	
----------	--	--

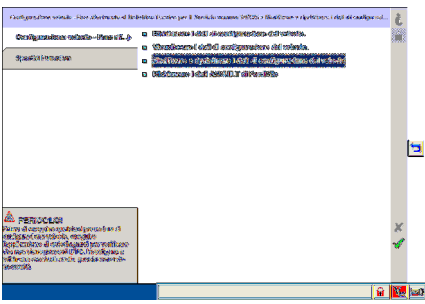6	Once back the main menu select the voice: Modify and reset the car configuration data.	
----------	---	---

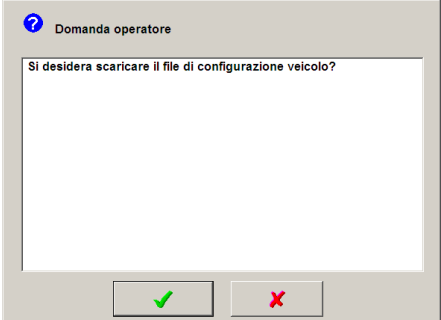7	Confirm the green symbol of the previous page. To the next question confirm again and follow the instructions supplied by the computer.	
----------	---	--


8	To the end of the procedure disconnect the IDS then by activating the ignition if the Parkview it is not already connected the car will visualize the sentence telling that the park system it is not working. It will disappear when the unit is connected.
----------	--

	<h1 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h1>	
---	--	---


PEUGEOT

Once the connections are done it must to activate the car to visualize the kit installed to do this please use the computer diagnosis DIAGBOX of Peugeot. Follow the steps below:


1 Connect the DIAGBOX to the OBD plug and Select the voice REPAIR, SELECT THE ITEMS IN SEQUENCE AS BELOW.

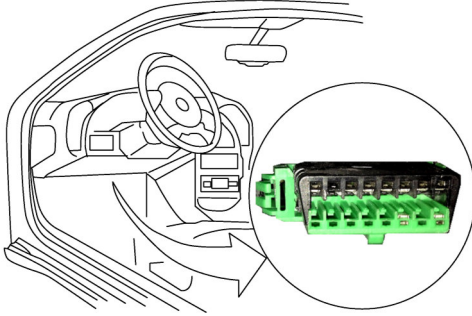


2 **TELEMATIC SMEG**

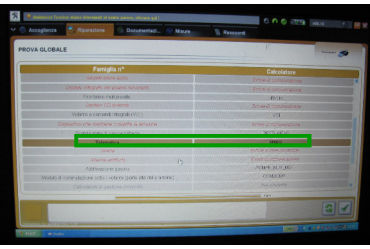


PACK REPARATION

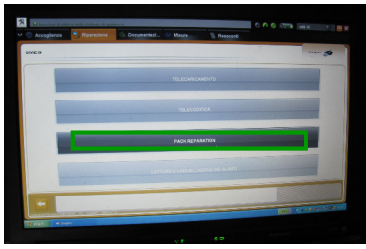


SPARE PART

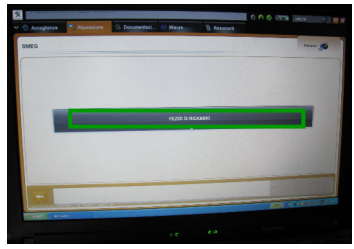


3 **MANUAL REMOTE CODING**

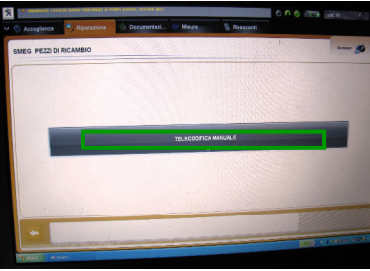



CONFIGURATIONS OF OTHER FUNCTIONS

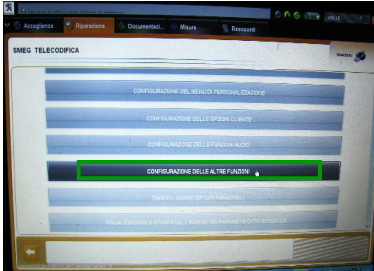

SUPPORT TO THE PARKING

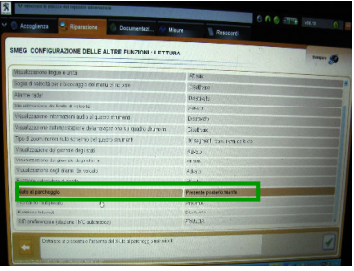


4 **PRESENT IN THE BACK**

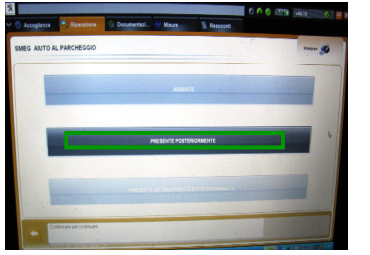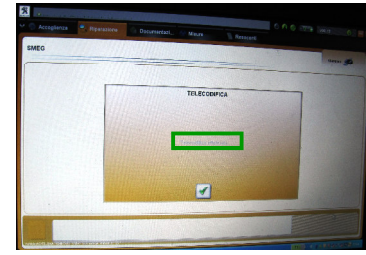



CONFIRMING THE SELECTION "PRESENT IN THE BACK" THE WINDOW REMOTE CODING CARRIED WILL APPEAR


5 **ELECTRONIC CALCULATOR MANAGEMENT (BSI)**

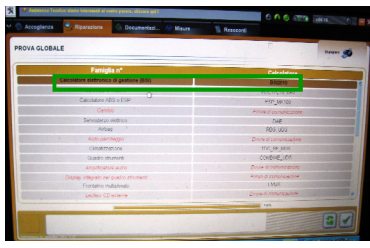

PACK REPAIR

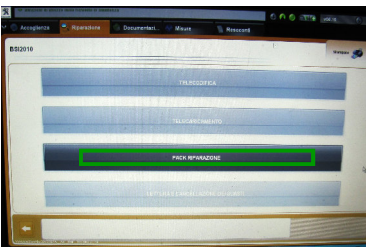


SPARE PARTS

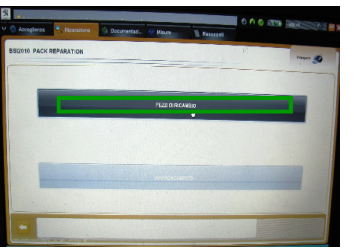


PEUGEOT


6 REMOTE CODING

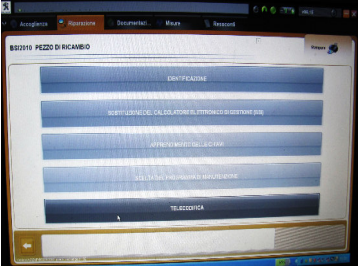

PRESENT CALCULATOR

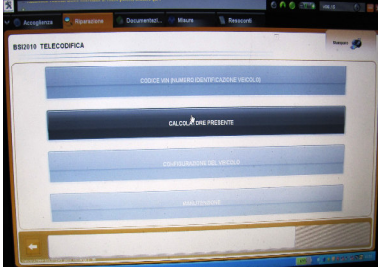

SUPPOERT TO THE PARKING "PRESENT"

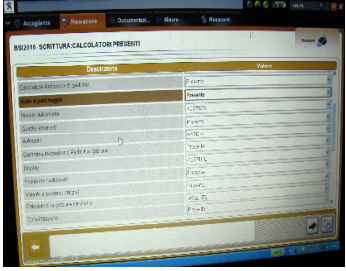


DESCRIZIONE	VALORE
Calcolo presenza P1	Presente
Calcolo presenza P2	Presente
Calcolo presenza P3	Presente
Calcolo presenza P4	Presente
Calcolo presenza P5	Presente
Calcolo presenza P6	Presente
Calcolo presenza P7	Presente
Calcolo presenza P8	Presente
Calcolo presenza P9	Presente
Calcolo presenza P10	Presente
Calcolo presenza P11	Presente
Calcolo presenza P12	Presente
Calcolo presenza P13	Presente
Calcolo presenza P14	Presente
Calcolo presenza P15	Presente
Calcolo presenza P16	Presente
Calcolo presenza P17	Presente
Calcolo presenza P18	Presente
Calcolo presenza P19	Presente
Calcolo presenza P20	Presente
Calcolo presenza P21	Presente
Calcolo presenza P22	Presente
Calcolo presenza P23	Presente
Calcolo presenza P24	Presente
Calcolo presenza P25	Presente
Calcolo presenza P26	Presente
Calcolo presenza P27	Presente
Calcolo presenza P28	Presente
Calcolo presenza P29	Presente
Calcolo presenza P30	Presente
Calcolo presenza P31	Presente
Calcolo presenza P32	Presente
Calcolo presenza P33	Presente
Calcolo presenza P34	Presente
Calcolo presenza P35	Presente
Calcolo presenza P36	Presente
Calcolo presenza P37	Presente
Calcolo presenza P38	Presente
Calcolo presenza P39	Presente
Calcolo presenza P40	Presente
Calcolo presenza P41	Presente
Calcolo presenza P42	Presente
Calcolo presenza P43	Presente
Calcolo presenza P44	Presente
Calcolo presenza P45	Presente
Calcolo presenza P46	Presente
Calcolo presenza P47	Presente
Calcolo presenza P48	Presente
Calcolo presenza P49	Presente
Calcolo presenza P50	Presente

	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---

PEUGEOT

The following procedure must be followed if you use the new software connected to the web, PLEASE DISCONNECT DIAGBOX FROM THE WEB! Once the connections are done it must to activate the Peugeot car to visualize the kit installed to do this please use the Peugeot computer diagnosis DIAGBOX of Peugeot. Follow the steps below:


1 Connect the DIAGBOX to the OBD plug and Select the voice EXPERT, SELECT THE ITEMS IN SEQUENCE AS BELOW.

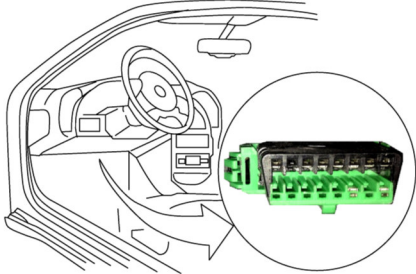


2 **AUTORADIO**




REPAIRING

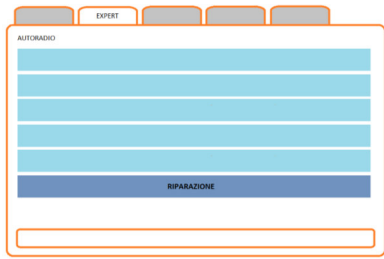


TELECODIING

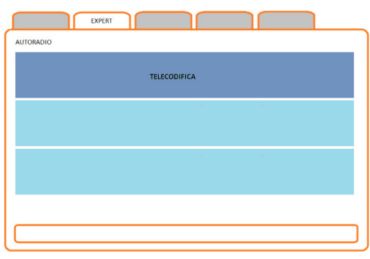


3 **TELECODING**

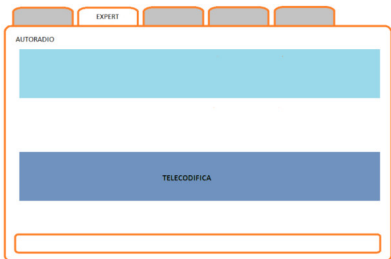


THI TELECODING FAILS

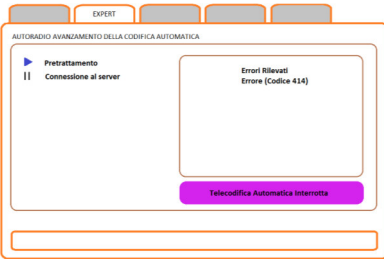


MANUAL TELECODING

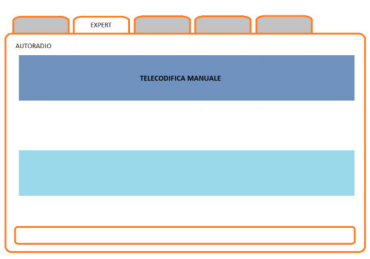


4 **RADIO CONFIGURATION**

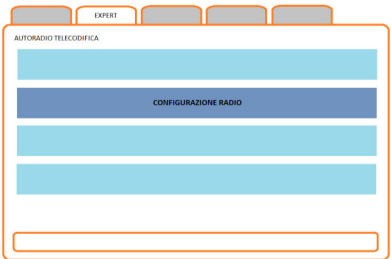


PARKING SUPPORT PRESENT

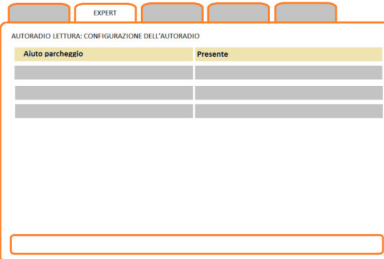


BACK TO EXPERT PAGE BSI BOX




5 **REPARING**

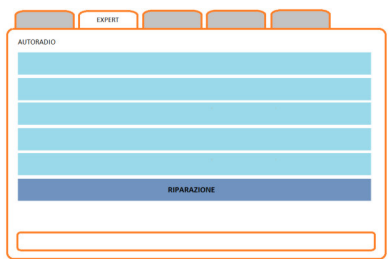

PACK REPARATION

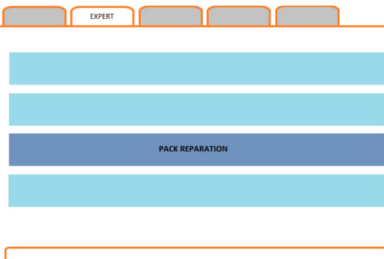

SPARE PARTS

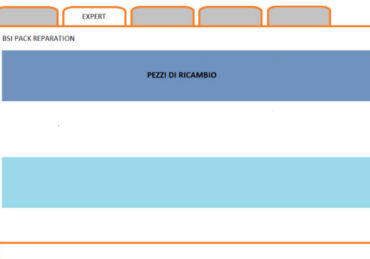


	<h2 style="margin: 0;">PARKING SENSORS ACTIVATION PROCEDURE</h2>	
---	--	---


PEUGEOT

The following procedure must be followed if you use the new software connected to the web, PLEASE DISCONNECT DIAGBOX FROM THE WEB! Once the connections are done it must to activate the Peugeot car to visualize the kit installed to do this please use the Peugeot computer diagnosis DIAGBOX of Peugeot. Follow the steps below:


6 TELECODING

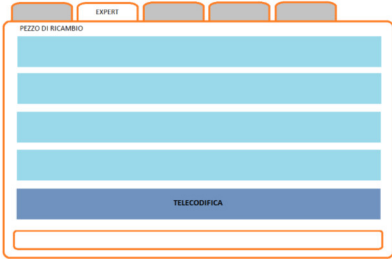

CALCULATOR PRESENT

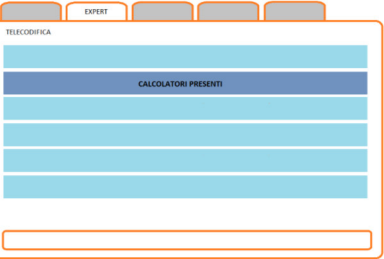


PARKING SUPPORT PRESENT

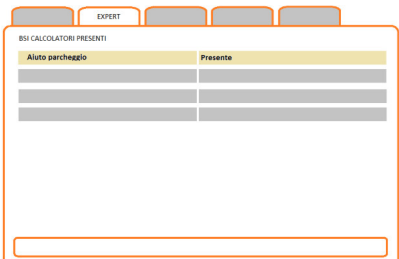


Aiuto parcheggio	Presente


7 BACK TO EXPERT PAGE
VISUALIZE MULTIFUNCTION EMF_C

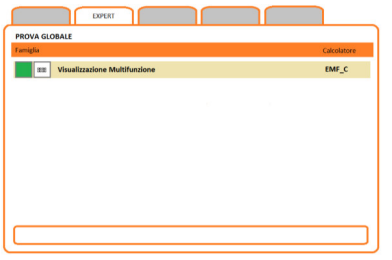


REPAIRING

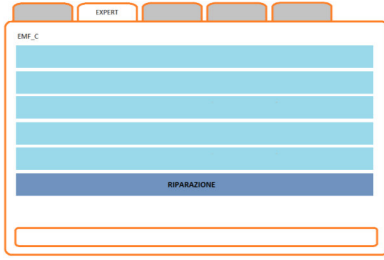


TELECODING

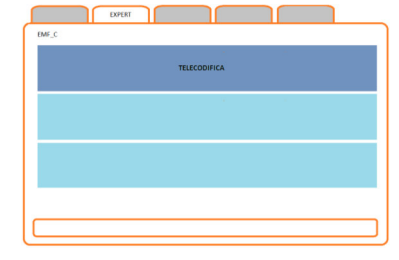


8 OPERATION FAILS

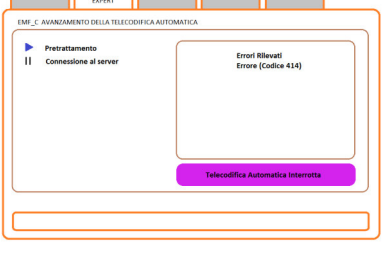


MANUAL TELECODING

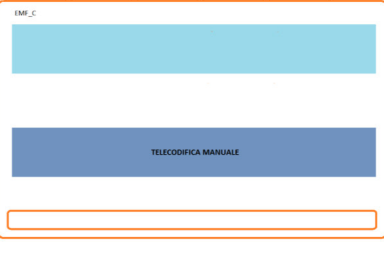

VEHICLE CONFIGURATION

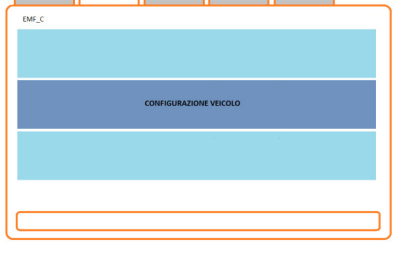

9 PARKING SUPPORT



Opzione Aiuto allo stazionamento	Presente

The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.